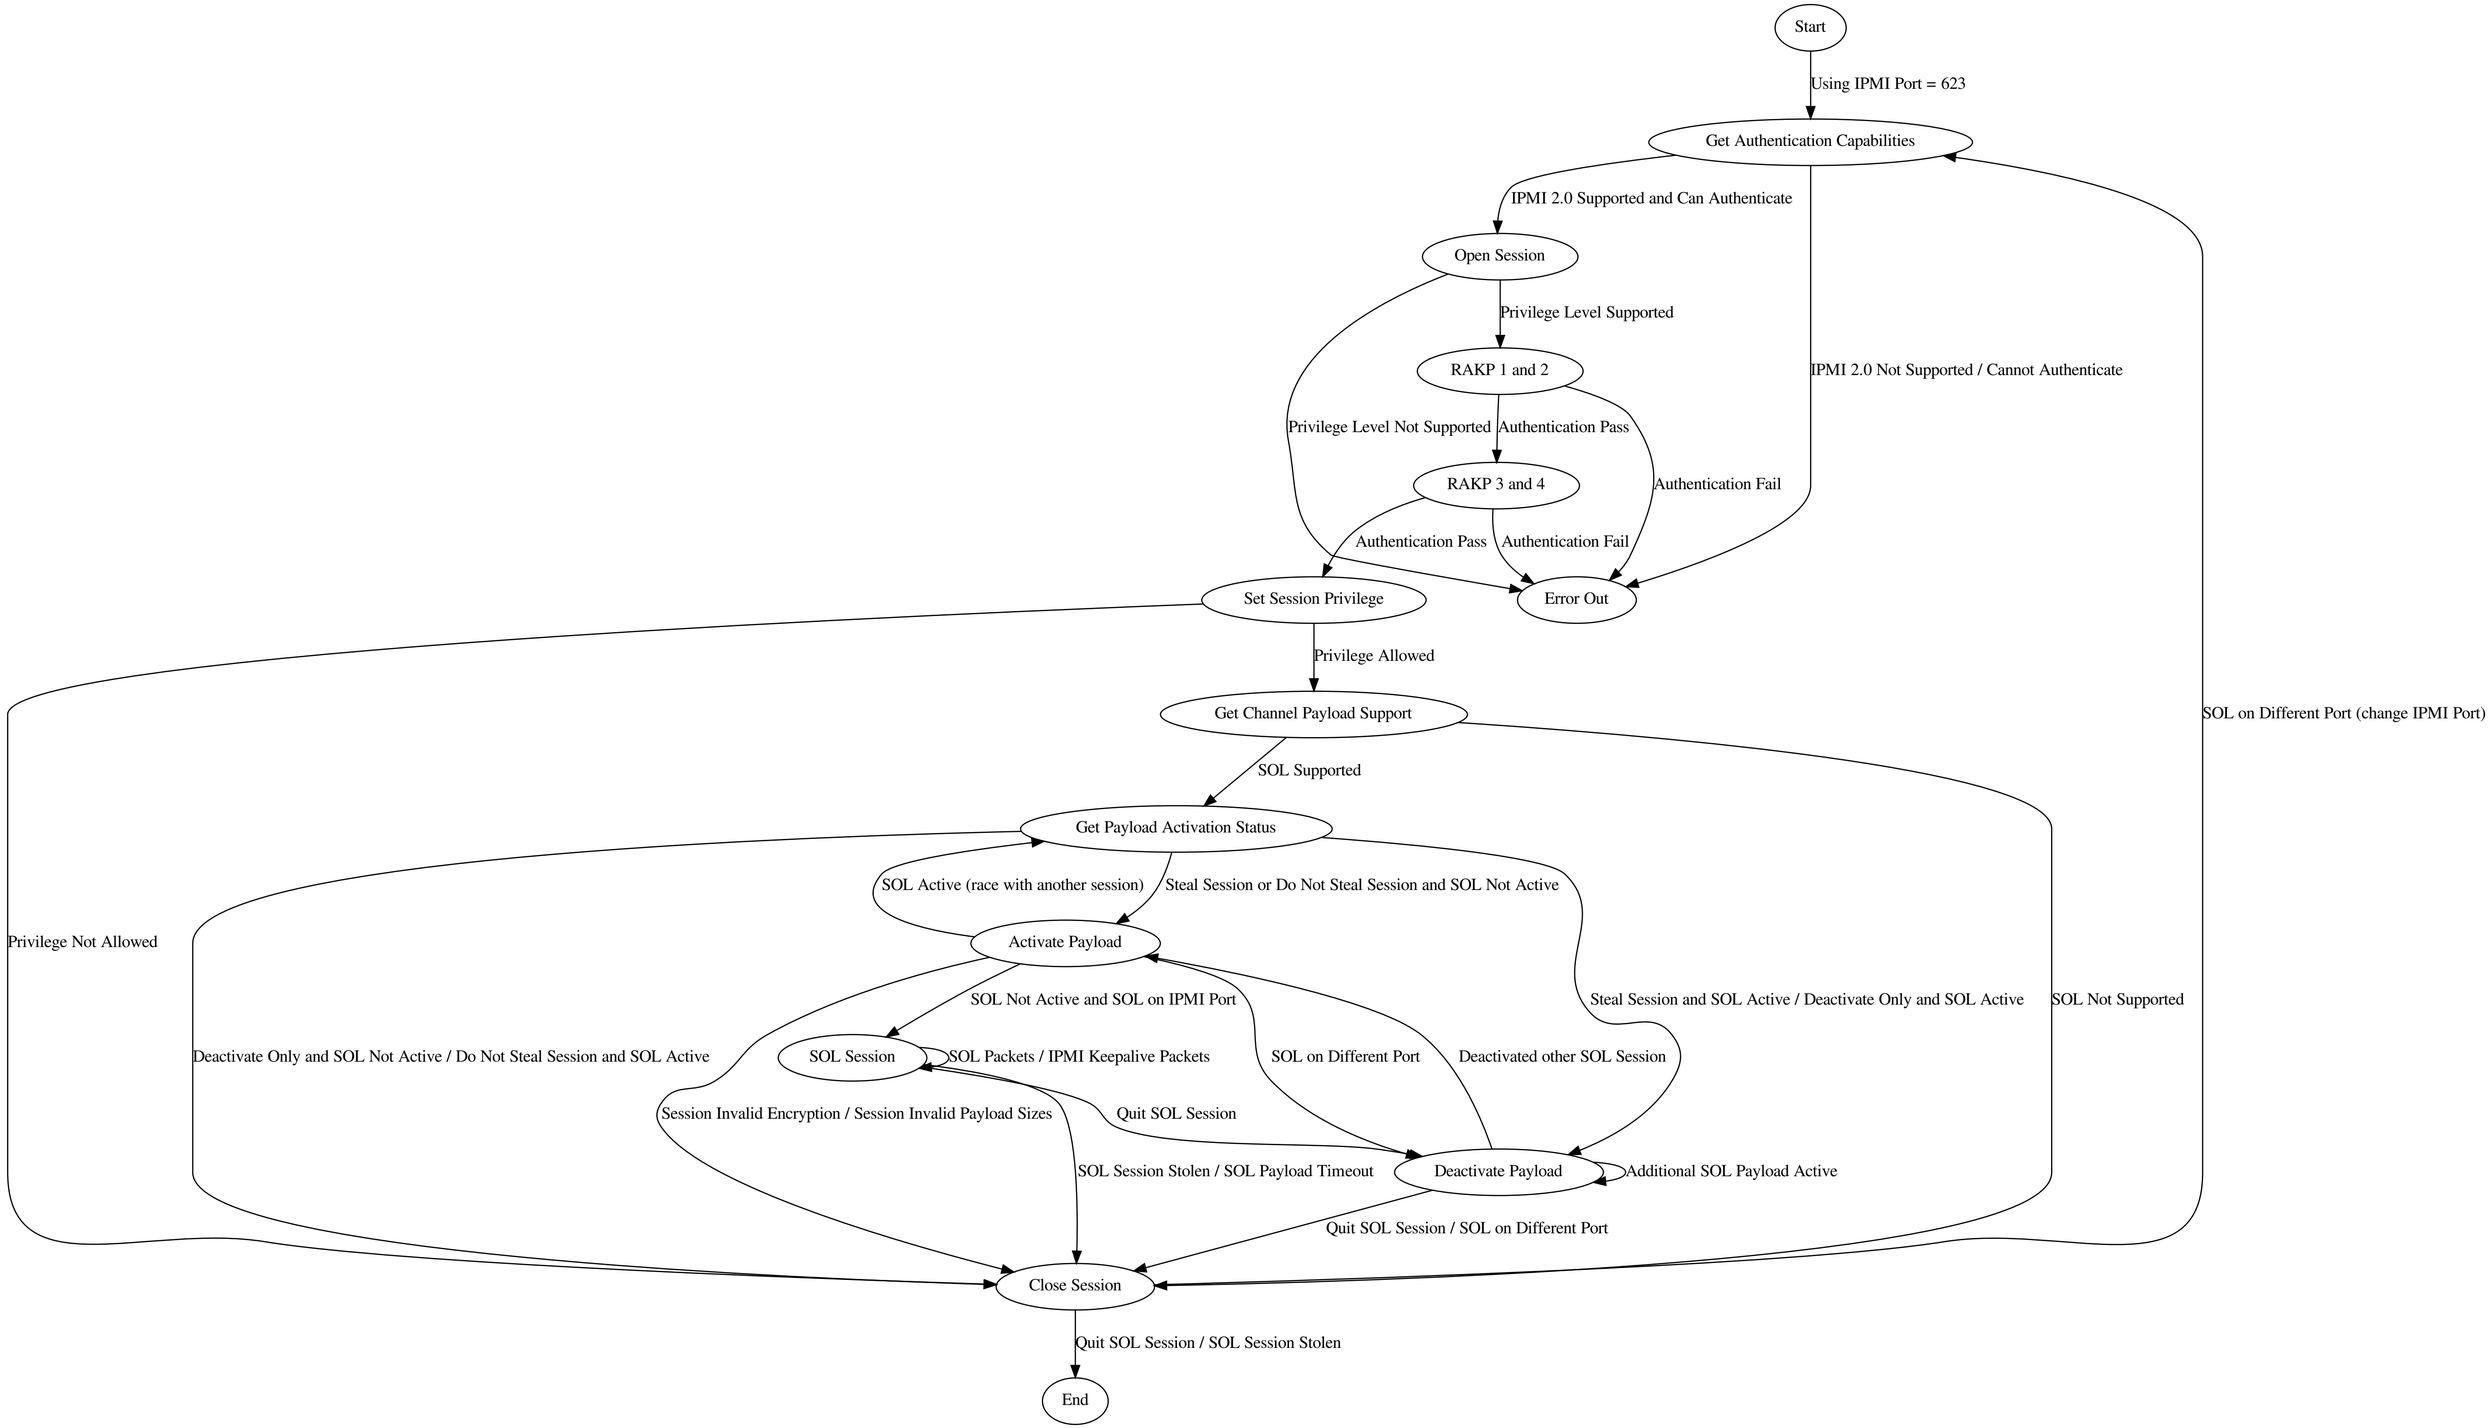
Start
Using IPMI Port = 623
Get Authentication Capabilities
IPMI 2.0 Supported and Can Authenticate
IPMI 2.0 Not Supported / Cannot Authenticate
Open Session
Privilege Level Supported
Privilege Level Not Supported
RAKP 1 and 2
Authentication Pass
Authentication Fail
RAKP 3 and 4
Authentication Pass
Authentication Fail
Error Out
Set Session Privilege
Privilege Allowed
Privilege Not Allowed
Get Channel Payload Support
SOL Supported
SOL Not Supported
SOL on Different Port (change IPMI Port)
Get Payload Activation Status
SOL Active (race with another session)
Steal Session or Do Not Steal Session and SOL Not Active
Steal Session and SOL Active / Deactivate Only and SOL Active
Activate Payload
SOL Not Active and SOL on IPMI Port
Deactivate Only and SOL Not Active / Do Not Steal Session and SOL Active
SOL Session
SOL Packets / IPMI Keepalive Packets
SOL on Different Port
Deactivated other SOL Session
Session Invalid Encryption / Session Invalid Payload Sizes
Quit SOL Session
SOL Session Stolen / SOL Payload Timeout
Deactivate Payload
Additional SOL Payload Active
Quit SOL Session / SOL on Different Port
Close Session
Quit SOL Session / SOL Session Stolen
End